Huawei Mobile WI-FI E5786

Recognize SSID (device name) and Wi-Fi Key

There are two ways to locate this:

On the main screen of the device

On the back of the device

Setup Guide

1. Connect your device, open Browser and go to Huawei 4G+ Pocket home page by entering **http://192.168.8.1** in the Address Bar.

2. Login to the home page by entering the following username and password

   Username: admin
   Password: admin

3. Go to **Settings > Quick Setup**

4. Default Profile Name is set to **Contract,** Select **Prepay** from Profile Name if it is a prepay customer.

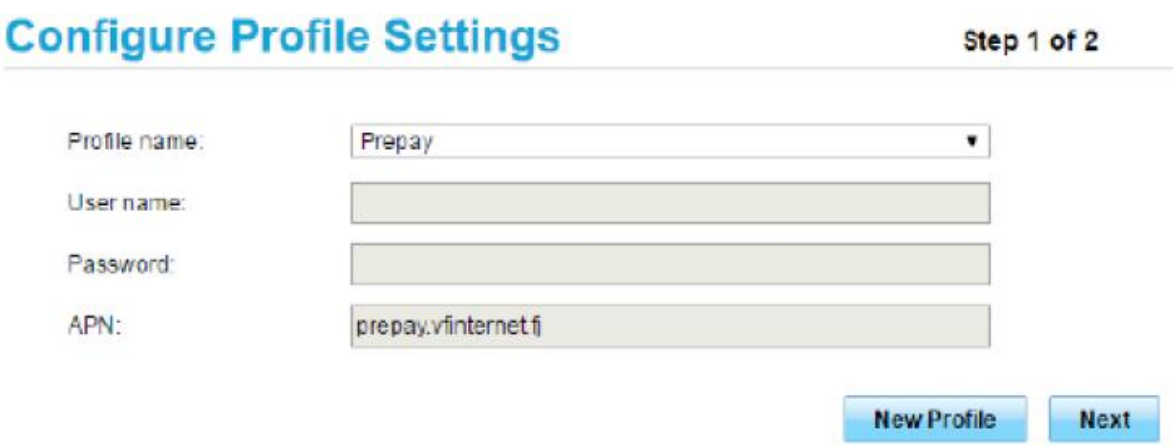

5. Click **Next** and configure **SSID** and **Password**.

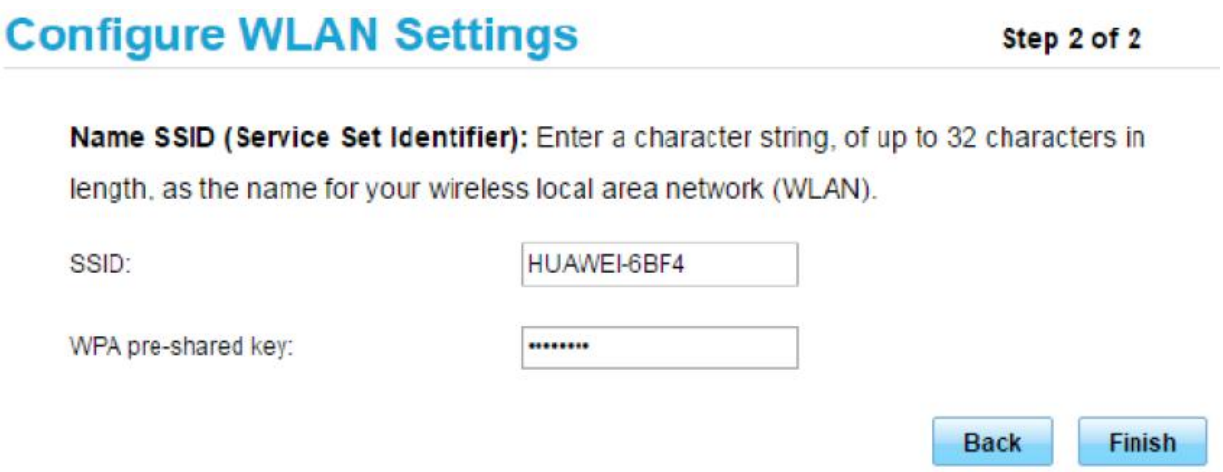

6. Click **Finish** to end Quick Setup.

Troubleshooting of Huawei Mobile Wi-Fi E5786

Profile Settings

Go to **"Settings"** tab
Select **"Profile Management"**
On the right **"Contract-Default"** states a Postpay number and **"Prepay"** would state a prepay number.
APN for Postpay number: vfinternet.fj
APN for prepay number: prepay.vfinternet.fj

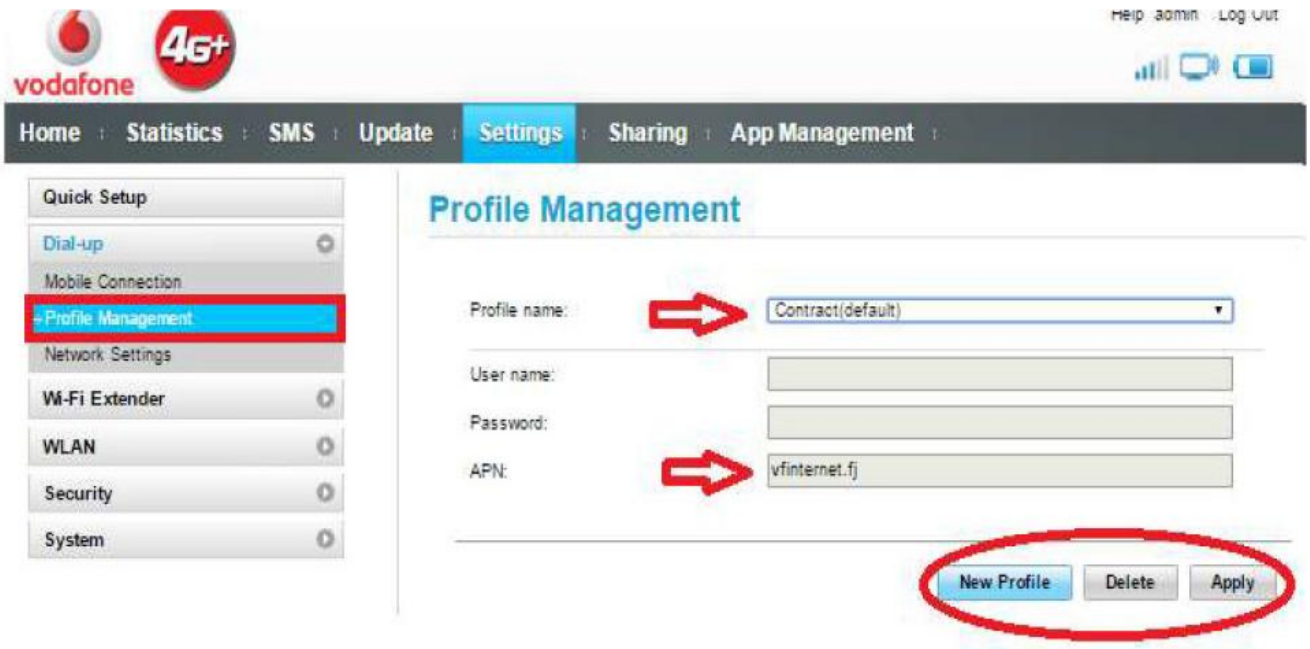

Changing Network Mode

Go to **"Settings"** tab
Select **"Network Settings"** tab on left
On the right under **"Network"** option you can select the drop down arrow key to change the network mode
Under **"Network Search"** option you can conduct a search with either **"Auto"** or **"Manual"** option

Modifying Password

Go to **"Settings"** tab
Select on **"System"** tab
Select on **"Modify Password"**
Follow the rest of the steps to set up your personalized password

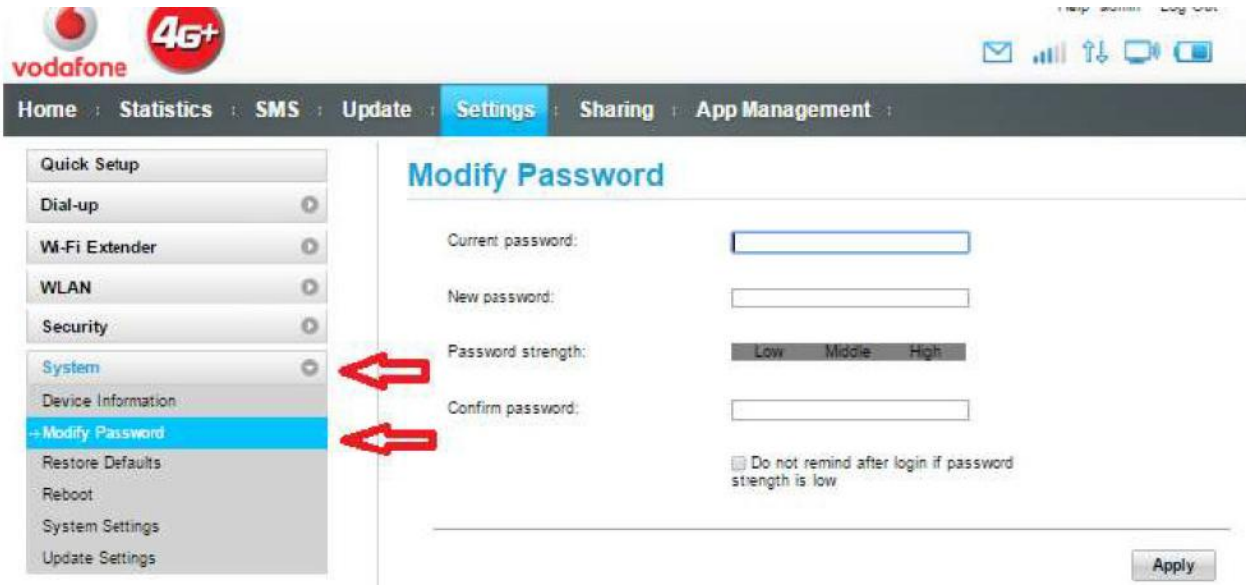

SMS Option

You can send a blank sms on 131 to check your remaining data balance or send recharge pin numbers to 132 for prepay customers to recharge their pocket Wi-Fi data number.

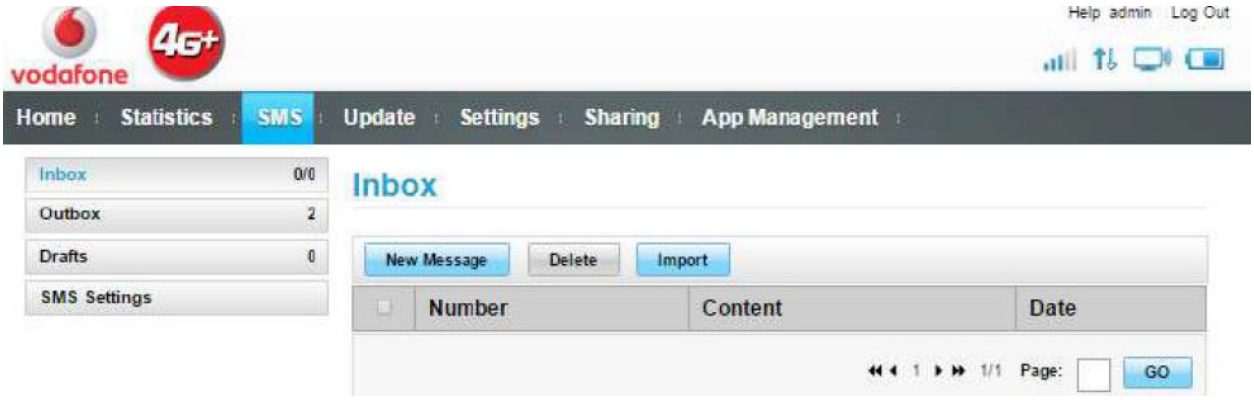

Retrieving Wi-Fi Key
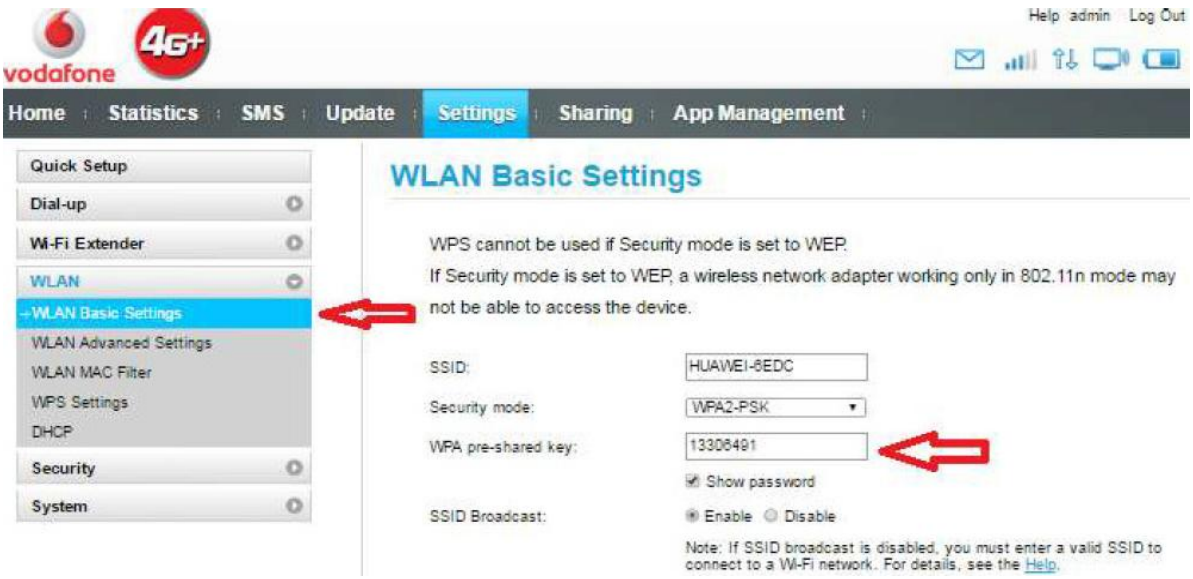
This is already available and displayed on the device however; you can also retrieve using the steps below:
Go to **"Settings"** tab
Select on **"WLAN Basic Settings"**
Check on **"Show password"** – key will get displayed.